

# Installation inflator tools

## User manual **English**



### INSTALLATION OF A "QUICK COUPLING" TO THE AIR TUBE.



1. Slide the tube clamp over the air tube.



2. Slide the "Quick coupling hose pillar" into the tube.




3. Move the clamp over the tube and the pillar of the coupling.



4. Turn the screw of the clamp to the right and fixate the clamp.

### CONNECTION OF AN AIR TOOL.

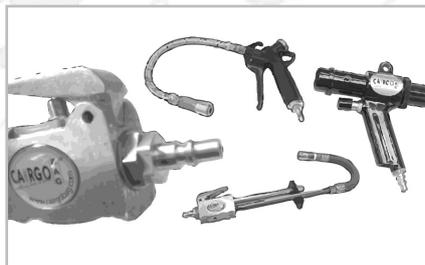

1. How to connect the air tool to the air tube?



2. Put the connector of the air tool into the quick coupling. Press them firmly together.



3. "Click", now the air tool is connected to the air tube.

### CONNECTION OF A VALVE CONNECTOR.



1. Before starting to work with the air tool you finally have to connect a valve connector.



2. Put one of the valve connectors into the quick coupling of the air tool.



3. "Click", now the valve connector is connected to the air tool.

**CAIRGO**<sup>®</sup>  
*nothing does it better*